






Features

- Very compact but suitable to large image format
- For industrial cameras up to sensor sizes of 24x36 mm or 41mm line sensors
- Fast f/2.0 aperture
- Precise manual focusing
- Robust full-metal construction
- Features special screws to fix focus and aperture settings even in rough situations
- Due to light weight resistant against vibrations and shocks

Camera Mount M42x1 screw mount (18 mm FFD)



Technical Specifications

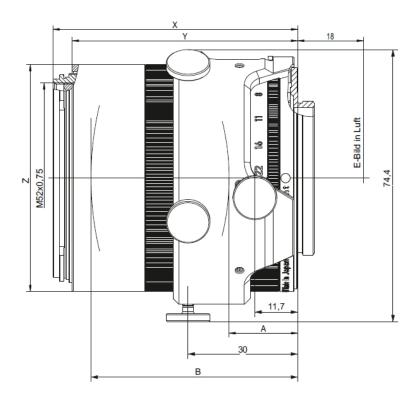


X	Υ	Z	Α	В
54 .0 mm (inf.)	49.4 mm	$\emptyset = 62.0 \text{ mm}$	11.72 mm (inf.)	52.61 mm (inf.)

Focal length	50 mm
Aperture range	f/2 - f/22
Number of elements / groups	6 / 4
Min. working distance (object to sensor)	450 mm (1.47 ft.) – ∞
Min. free working distance	370 mm (1.21 ft.) – ∞
Angular field* (diag. / horiz. / vert.)	46 / 39 / 26°
Max. diameter of image field	43 mm (1.7")
Flange focal length	18,0 mm
Coverage at close range	248 x 165 mm (9.7 x 6.5"), line 282 mm (11.1")
Image ratio at close range	1:6.9
Filter-thread	M 52 x 0.75
Weight	374 g (0.8 lbs.)
Camera mount	M42 (18.0 mm FFD)

^{*} referring to 24 x 36 mm format resp. 43 mm line



Relative Illuminance*

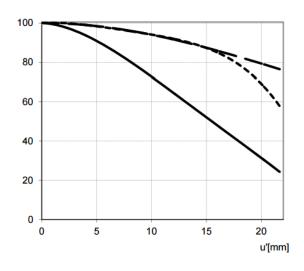


E [%]

The relative illuminance shows the image brightness over the image height u' in relation to the image center.



Relative Distortion*

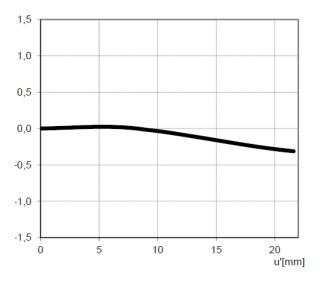


*Data for infinite focus setting

V [%]

The relative distortion shows the deviation of the image height from the expected image height u' in percent.



MTF Charts*

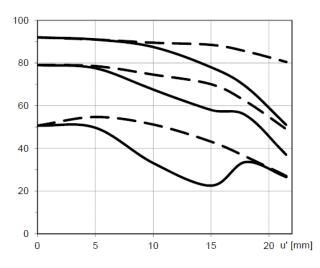


Contrast [%]

The Modulation Transfer (MTF) as a function of image height (u) and slit orientation (sagittal, tangential) has been measured with white light at spatial frequencies of R=10, 20 and 40 cycles/mm.

F-Number 2.0


- __ Sagittal
- ... Tangential

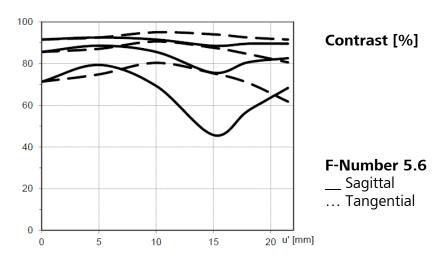

*Data for infinite focus setting




Spectral Transmission

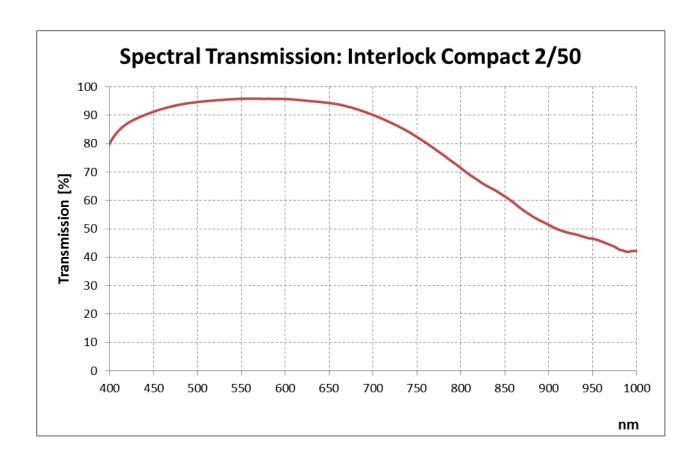



Sketch of the M42x1 Interface (FFD 18.0 mm)

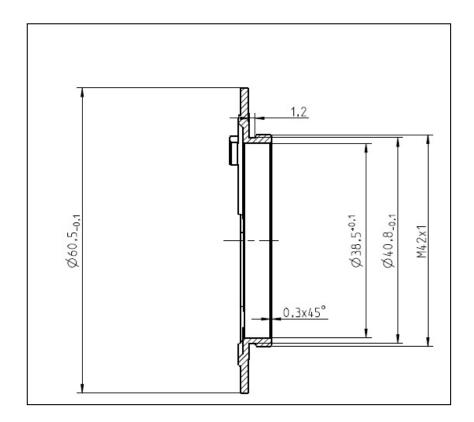

The diameter of the camera/lens adapter must not exceed 60 mm at the interface to the lens!